


CAR UNIT (Receiver)

ESP32 + L298N + 4 Wheel Drive

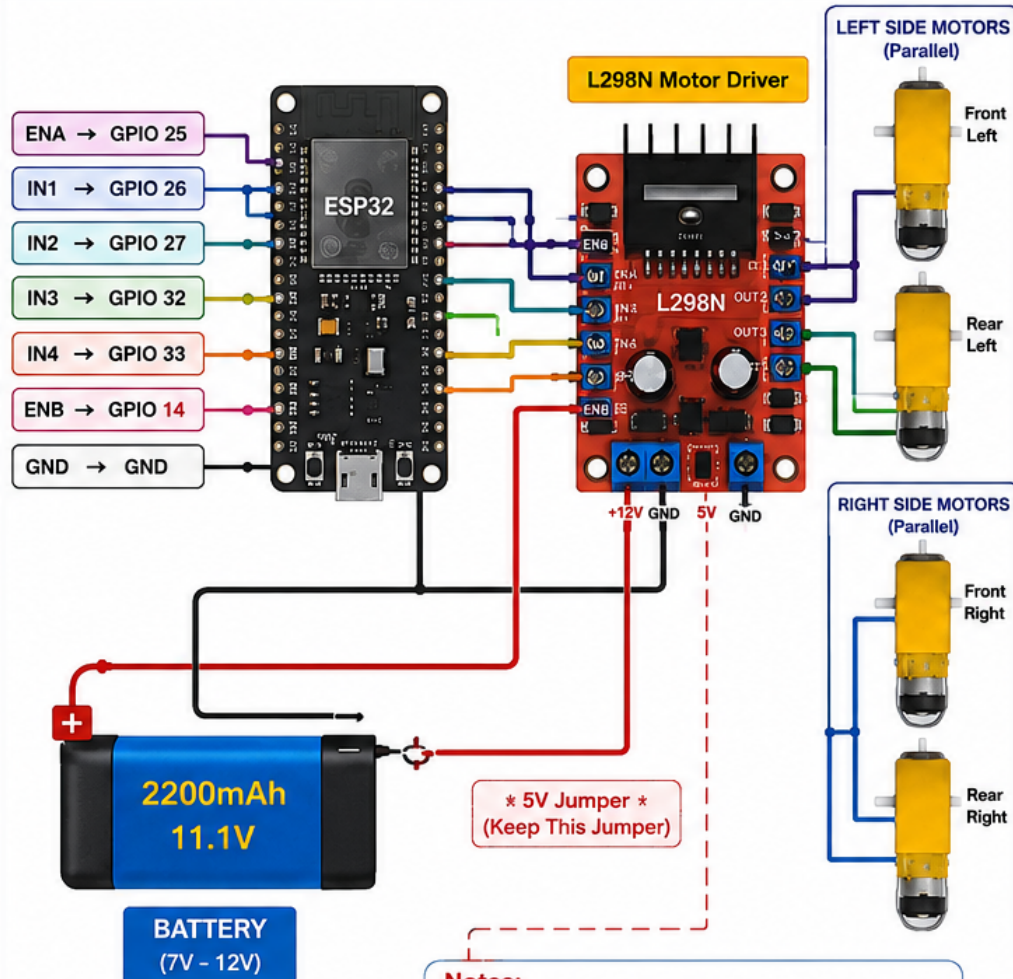


Notes:

- ✓ Remove ENA and ENB jumpers from L298N.
- ✓ Connect motors of each side in parallel.
- ✓ Battery powers the motors (through L298N).
- ✓ ESP32 can be powered using 5V from L298N 5V pin (if jumper is ON) or use a separate 5V supply.

JOYSTICK UNIT (Transmitter)

ESP32 + Joystick Module

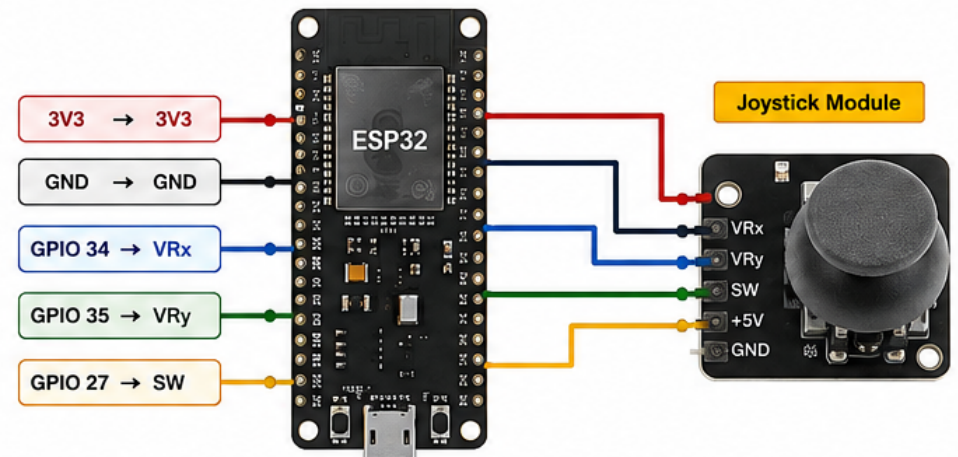

Power Options

Option 1

5V Power Bank



Option 2

3.7V Li-ion Battery



How It Works

Tilt or move the joystick. The ESP32 reads the values and sends commands wirelessly to the Car Unit using ESP-NOW.

Joystick Movement		→	Car Action
↑	Tilt / Push Forward	→	Go Forward
↓	Tilt / Push Backward	→	Go Backward
←	Tilt Left	→	Turn Left
→	Tilt Right	→	Turn Right
●	Press (SW)	→	Stop

Communication: ESP-NOW (Wireless)
Ensure both ESP32 boards are paired before power ON.